

Polygonadapter

Produktbeschreibung


Der Polygonadapter aus Edelstahl ermöglicht das Anbringen der Kupplung an einer vorhandenen Fahrradachse. Inklusive Zahnscheibe und Schraube. Benötigtes Werkzeug: Drehmomentschlüssel (0 bis 50 Nm) mit 13- und 19-mm-Adapter.

Gewindeart:

		X Nm
M10,5 x 1	A-PA105-23-BK100	35 - 40 Nm
M5 x 0,8	A-PA50-23-BK080	*
M10 x 1	A-PA100-23-BK100	35 - 40 Nm
3/8" x 26	A-PA38-23-BK260	30 - 40 Nm
M12 x 1,25	A-PA12-23-BK125	40 - 50 Nm

*Für einen sicheren Betrieb muss der Schnellspanner korrekt montiert werden. Der Spannhebel ist mit deutlich spürbarem Widerstand per Hand zu schließen – weder zu locker noch mit übermäßiger Kraft. Achte auf die Ausrichtung des Hebels: Er muss nach dem Schließen nach hinten gerichtet sein, um ein unbeabsichtigtes Öffnen während der Fahrt zu verhindern. Nach den ersten Fahrten solltest Du die Klemmkraft kontrollieren und bei Bedarf nachziehen.

Übersicht

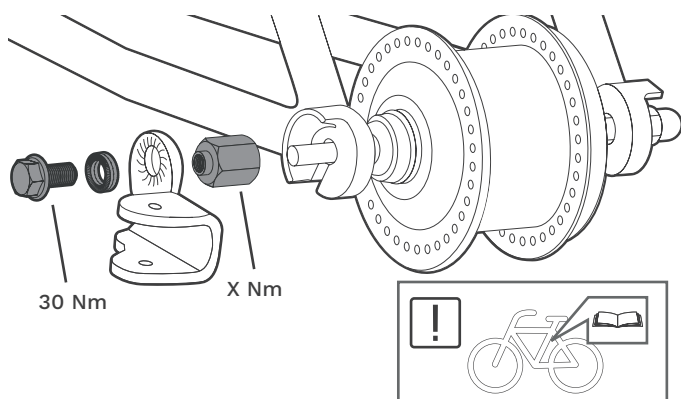

Copyright

Alle Rechte an dieser Dokumentation verbleiben bei der Qeridoo GmbH.

Enthaltene Texte, Werte und Abbildungen dürfen nicht unbefugt vervielfältigt, verbreitet, zu Wettbewerbszwecken verwertet oder anderen zugänglich gemacht werden. Sollten im Rahmen dieser Dokumentation weitere Produktnamen verwendet werden, sind diese in der Regel als eingetragene Warenzeichen des jeweiligen Herstellers anzusehen.

Qeridoo GmbH


Industriepark Nord 100
53567 Buchholz
Deutschland

URL: www.qeridoo.de
Mail: info@qeridoo.de
Fax: +49 (0) 2683 9451925

HOTLINE
+49 (0) 2683 9466577

Mo. – Do.: 9.00 bis 12.00 Uhr
14.00 bis 16.00 Uhr

Die Zeiten können abweichen. Aktuelle Zeiten findest Du unter: www.qeridoo.de

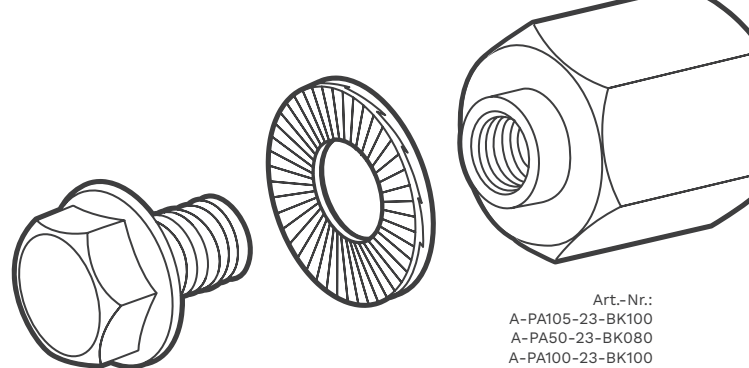

Art.-Nr.:
A-PA105-23-BK100
A-PA50-23-BK080
A-PA100-23-BK100
A-PA38-23-BK260
A-PA12-23-BK125

Hinweise



WARNUNG!

Das Anzugsdrehmoment richtet sich nach den Herstellerangaben Deines Fahrrads. Die Werte für den Polygonadapter sind Richtwerte – maßgeblich ist immer das schwächste Bauteil (z. B. Ausfallende oder Achsgewinde). Verwende nach Möglichkeit einen kalibrierten Drehmomentschlüssel. Der Adapter muss mindestens sechs vollständige Gewindegänge auf die Achse geschraubt werden, um eine sichere Klemmung zu gewährleisten. Nach den ersten Fahrten solltest Du die Klemmkraft kontrollieren und bei Bedarf nachziehen. Verwende kein Werkzeug, das mit gewöhnlichem Stahl in Berührung kam – auch kleinste Stahlpartikel können übertragen werden und zu Kontaktkorrosion führen. Durch die Bauweise der Kupplung kann es an der Kontaktstelle zum Fahrradrahmen zu leichten Kratzern oder Abriebspuren kommen. Dies ist technisch bedingt und kein Reklamationsgrund.

Sichere das Fahrrad gegen Umfallen und achte darauf, dass das Hinterrad nach dem Lösen der Verschraubung nicht aus der Achsaufnahme fallen kann. Verwende einen Montageständer oder drehe das Fahrrad so, dass es auf Sattel und Lenker gestellt werden kann.



GEFAHR!

Die fachgerechte Montage des Polygonadapter ist entscheidend für einen sicheren Anhängerbetrieb. Eine unsachgemäße Befestigung kann sich während der Fahrt lösen – mit potenziell schweren Unfallfolgen. Wenn Du Dir unsicher bist, lasse die Montage von einer qualifizierten Fahrradwerkstatt durchführen. Vor der Montage ist die Kompatibilität zu prüfen. Dieser Adapter ist nicht geeignet für Fahrräder mit Carbonrahmen, Carbon-Ausfallenden oder Carbon-Hinterbau (Bruchgefahr!).



TIPP!

Empfehlung: Anti-Seize Montagepaste

www.becco.bike

qeridoo.de/go/manual



Supportinformationen

Bitte wende Dich bei Fragen zu unseren Produkten direkt an uns. Unsere aktuelle Händlerliste: qeridoo.de/go/haendlersuche



[f](https://www.facebook.com/qeridoo) [y](https://www.youtube.com/qeridoo) [i](https://www.instagram.com/qeridoo) [t](https://www.tiktok.com/qeridoo)
www.qeridoo.de

Polygonadaptor

Product description


The stainless steel polygon adapter allows the attachment of the coupling to an existing bicycle axle. Including toothed washer and screw. Required tools: Torque wrench (0 to 50 Nm) with 13 and 19 mm adapter.

Type of thread:

		X Nm
M10.5 x 1	A-PA105-23-BK100	35 - 40 Nm
M5 x 0.8	A-PA50-23-BK080	*
M10 x 1	A-PA100-23-BK100	35 - 40 Nm
3/8" x 26	A-PA38-23-BK260	30 - 40 Nm
M12 x 1.25	A-PA12-23-BK125	40 - 50 Nm

For safe operation, the quick release must be installed correctly. The lever should be closed by hand with noticeable resistance – not too loose and not excessively tight. Make sure the lever is positioned correctly: After closing, it must point to the rear to prevent accidental opening while riding. After the first rides, check the clamping force and retighten if necessary.

Overview

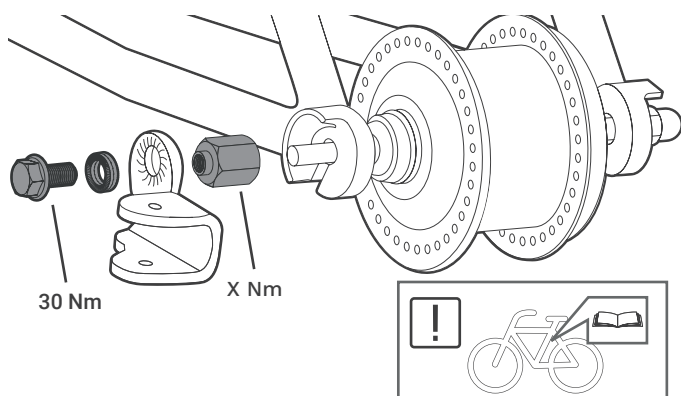

Copyright

All rights to this documentation remain the property of Qeridoo GmbH.

The texts, values and illustrations contained herein may not be reproduced, distributed, used for competitive purposes or made available to others without authorization. If other product names are used within the scope of this documentation, these are generally to be regarded as registered trademarks of the respective manufacturer.

Qeridoo GmbH


Industriepark Nord 100
53567 Buchholz
Germany

URL: www.qeridoo.de
Mail: info@qeridoo.de
Fax: +49 (0) 2683 9451925

HOTLINE
+49 (0) 2683 9466577

Mon. – Thu.: 9.00 am – 12 pm
2 pm – 4 pm

Times may vary. Current times can be found at: www.qeridoo.de

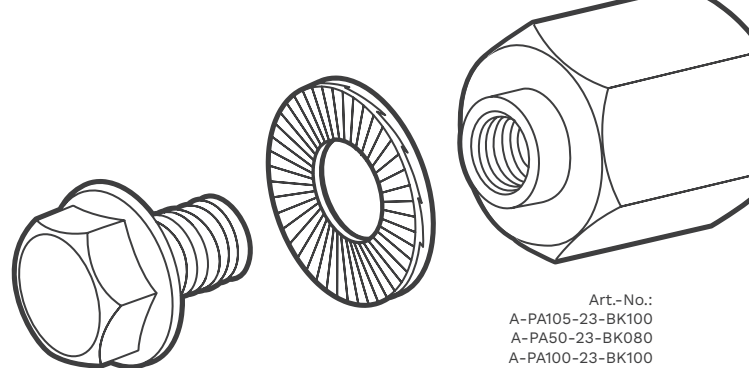

Art.-No.:
A-PA105-23-BK100
A-PA50-23-BK080
A-PA100-23-BK100
A-PA38-23-BK260
A-PA12-23-BK125

Notes



CAUTION!

The tightening torque depends on the manufacturer's specifications for your bicycle. The values for the polygon adapter are guideline values only – the weakest component is always decisive, for example the dropout or axle thread. Use a calibrated torque wrench whenever possible. The adapter must be screwed onto the axle by at least six full thread turns to ensure secure clamping. After the first few rides, you should check the clamping force and retighten it if necessary. Do not use tools that have come into contact with ordinary steel – even the smallest steel particles can be transferred and may cause contact corrosion. Due to the design of the coupling, slight scratches or abrasion marks may occur at the contact point with the bicycle frame. This is technically unavoidable and does not constitute grounds for a complaint.

Secure the bicycle against tipping over and make sure that the rear wheel cannot fall out of the axle mount after loosening the screw connection. Use a repair stand or turn the bicycle upside down so that it rests on the saddle and handlebar.



DANGER!

The professional installation of the polygon adapter is essential for safe trailer operation. Improper fastening may come loose while riding and could result in serious accidents. If You are unsure, have the installation carried out by a qualified bicycle workshop. Compatibility must be checked before installation. This adapter is not suitable for bicycles with carbon frames, carbon dropouts or carbon rear triangles due to the risk of breakage.



TIP!

Recommendation: Anti-seize assembly paste

www.becco.bike

qeridoo.de/go/manual



Support information

Please contact us directly if you have any questions about our products. Current list of dealers: qeridoo.de/go/haendlersuche



[f](https://www.facebook.com/qeridoo) [y](https://www.youtube.com/qeridoo) [i](https://www.instagram.com/qeridoo) [t](https://www.tiktok.com/qeridoo)
www.qeridoo.de